



BALDEWEIN CO
M70 & M75
M70S & M75S

PARTS LIST

- | | |
|---|-------------------------------|
| F Renewable Cartridge Unit — Model F-90 Series | |
| SF Renewable Cartridge Unit — Model F-90 SS Series | |
| J Renewable Cartridge Unit — Model S-80 Series | |
| SJ Renewable Cartridge Unit — Model S-80 SS Series | |
| M-70 Renewable Cartridge Unit — Model M Series (shown) | |
| S-70 Renewable Cartridge Unit — Model S Series | |
| 6 Lever Arm | |
| 8S Stainless Steel Seat | |
| 18 Cage | |
| 20B Renewable Rubber Cover (Black) | 22 Lever Arm Bushing |
| 20R Renewable Rubber Cover (Red) | 24 Lever Arm Screw |
| 20W Renewable Rubber Cover (White) | 28 Lock Rings |
| 21 Hose adapter (1/2", 5/8", 3/4")
(3/4" Garden Hose Thread) | 29 Body |
| 21S Swivel Hose Adapter (1/2", 5/8", 3/4")
(3/4" Swivel Garden Hose Thread) | 30 Lock Screw |
| | 31 Stem guide |
| | 32 Body Sealing O-Ring |

INSTRUCTION FOR SERVICING

(Caution: Not for use on steam hose)*

The entire working parts of the Strahman Water-Saver Spray Nozzle are contained in a single cartridge (F, J, M, S). This cartridge can be removed by:

1. Remove rubber cover (20) by slipping the rubber off the back of nozzle and pulling over front.
2. Remove lever arm screw (24) and remove lever arm (6)
3. Unscrew lock screw (30) and extract the cartridge from back end of nozzle with cage (18).
4. To insert new cartridge, reverse above procedure. (Immerse a new rubber cover in a mild solution of soap and warm water, to ease replacement).
5. Be sure when replacing cage (18) to place cut-away part of cage facing downward, so lever arm (6) can be inserted.
6. Be sure lever arm is placed ahead of stem guide (31) on cartridge unit.

*Please see back cover for additional information and instructions.